

TABLE OF CONTENTS

	PAGE
INTRODUCTION	i
GENERAL INSTRUCTIONS	ii
PART ONE	
TROUBLESHOOTING GUIDE AND GENERAL TROUBLESHOOTING	1
SEQUENCE AND SCOPE OF INSPECTIONS WHEN DISCOVERING FAULTS	1
GENERAL TROUBLESHOOTING	2
1. Rust and powder deposits on the surfaces of parts and in the bore.....	2
2. Cracks.....	3
3. Bent parts	3
4. Dents	3
5. Dimples or nicks on parts.....	3
6. Damage to screw slots.....	3
7. Clogged or stripped threads	3
8. Abrasion of the oxide coating	3
9. Discrepancy between the part numbers and the main machine number	4
10. Surfacing and welding of parts	4
PART TWO	
DETECTION OF MALFUNCTIONS (AND REPAIR OF 7.62-mm AUTOMATIC WEAPON (Submachine gun) Model 1941	4
BARREL TROUBLESHOOTING AND REPAIR.....	4
1. Marginal wear of the bore, rust or pitting in the bore, rounding or beveling of the corners of the rifling edges.....	4
2. Bulged barrels.	5
3. Bending of the barrel.....	5
4. Traces of rust or pitting in the chamber of a non-chrome-plated barrel.	7
5. Nicks on the mouth of the chamber.	7
6. Nicks on the muzzle of the barrel.	7
TROUBLESHOOTING AND REPAIR OF THE RECEIVERS WITH BARREL	8
Bending of the Receiver.....	8
Barrel Play in the Front Receiver Guide.....	8
Longitudinal movement of the barrel in the receiver.....	8
Cracks in the barrel shroud/receiver cover.....	9
Breakage or crushing of the protrusion and the right ledge of the receiver.....	10

Bending and swinging of the front sling loop.....	10
Removal of the sling loop.....	10
(I) Tighten a loose stop with a hammer, placing the head of the stop on a metal stand.....	11
It is difficult to open and close the receiver.....	11
Self-opening of the receiver.....	11
Latch pin falls out.....	12
The vertical play of the receiver at the junction of the latch with the bolt box.....	13
TROUBLESHOOTING AND REPAIR OF THE AIMING ASSEMBLY.....	14
Movement of the rear sight base.....	14
Movement of the base of the front sight.....	14
The rear sight is hard to move from one position to another.....	14
Sight is not held in position.....	14
Loose fit of the rear sight pin.....	14
Front sight protector fracture.....	15
Faults affecting the aiming accuracy.....	15
TROUBLESHOOTING AND REPAIR OF OLD STYLE SIGHTS.....	17
Movement of the sight block.....	17
Loose attachment of the elevation bar pin.....	17
The elevation bar does not move freely.....	17
The elevation adjustment collar is difficult to move along the elevation bar.....	17
The elevation collar is not held in the elevation slots.....	18
Burrs on the slots and notches of the elevation bar.....	18
TROUBLESHOOTING AND REPAIR OF THE BOLT BOX { <i>LOWER RECEIVER</i> }.....	18
Bending of the bolt box.....	18
Detachment of the bolt box clip.....	18
Loose ejector.....	18
Movement of the stock shank of the bolt box.....	19
The magazine falls out of the bolt box.....	19
TROUBLESHOOTING AND REPAIR OF THE SCREW.....	19
Separation of the front part of the trigger guard.....	19
The trigger pin and trigger lever pins fall out.....	20
TROUBLESHOOTING AND REPAIR OF THE BOLT, TRIGGER, AND RECOIL SPRING.....	20
The bolt is difficult to move.....	20
Misfires.....	20
The shell (or cartridge) is not extracted from the chamber.....	21
The shell (or cartridge) is not held by the extractor and falls into the receiver.....	21
The shell (or cartridge) is not ejected from the receiver.....	21
The bolt is not held on the safety lock.....	23
The safety is difficult to move.....	24
The bolt is not released from the sear of the trigger lever (the selector is set to automatic fire).....	24

Weak bolt release when cocked	25
Difficult release of the cocked bolt	25
Double shots during single fire, or spontaneous automatic firing	25
The trigger does not return to the forward position	26
Play of the bolt handle.....	26
Loose fit of the firing pin retaining pin.....	26
Shock absorber pad damage.....	26
TROUBLESHOOTING AND STOCK REPAIR.....	27
Damage to the stock.....	27
Cracks in the bed of the neck or spalling of the cheek of the bed.....	39
The accessory falls out of the accessory hollow in the butt.....	39
DRUM MAGAZINE TROUBLESHOOTING AND REPAIR.....	39
Cartridges are not fed from the magazine to the chamber	39
The magazine drum breaks off the drum latch.....	43
BOX MAGAZINE TROUBLESHOOTING AND REPAIR	44
Cartridges are not fed from the magazine to the chamber	44
Magazine cover falls off.....	45
TROUBLESHOOTING AND ACCESSORY REPAIR	45
Troubleshooting and Wiper Repair.....	45
It is difficult to rotate the wiping head on the stem.....	45
It is difficult to connect the wiper with the cleaning rod	45
Movement of the wiper head relative to the stem	45
Troubleshooting and repairing the screwdriver	46
Troubleshooting and repairing the oiler	46
Troubleshooting and repair of cleaning rod section.....	46

PART THREE

TROUBLESHOOTING AND REPAIR OF 7.62-mm AUTOMATIC WEAPON.....	47
(Submachine gun) Mod. 1943	
BARREL TROUBLESHOOTING AND REPAIR	47
TROUBLESHOOTING AND REPAIR OF THE RECEIVER WITH BARREL	48
Bent or collapsed compensator	48
Cracks in the compensator	48
Barrel movement in the barrel guide.....	48
Longitudinal movement of the barrel in the receiver.....	48
Play of the receiver liner	48
Cracks in the barrel housing.....	50
Bent sling swivel.....	50
Removing the front sling loop	50

TROUBLESHOOTING AND REPAIR OF THE SIGHTS	50
Loose rear sight base.....	50
Loose front sight base	51
Rear sight is difficult to move from one position to another	51
The rear sight is not held in the selected position	52
The pivot pin is not held in the lugs of the sight base.....	52
Faults affecting aiming accuracy	52
TROUBLESHOOTING AND REPAIR OF THE TRIGGER BOX {housing}.....	54
Cracks in the front of the trigger box.....	54
Separation of the trigger guard from the trigger box	54
Broken, chipped, or cracked grip plates.....	54
Loose weld of the magazine latch bracket.....	54
Self-loosening nuts of grip plates.....	54
Difficulty opening and closing the trigger box	54
Self-opening trigger box	55
Loss of the magazine from the neck of the trigger box.....	56
Difficulty with inserting and removing the magazine.....	56
TROUBLESHOOTING AND REPAIR OF THE BOLT, TRIGGER, AND RECOIL SPRING	56
The bolt moves with difficulty	56
The bolt does not stay to the rear (spontaneous automatic firing)	57
Misfires	58
The shell (or cartridge) is not removed from the chamber.....	58
Shell (or cartridge) is not ejected from the receiver.....	59
Jumping off the clip from the shock absorber.....	60
Loose bolt handle	60
The bolt block is not held by the safety catch.....	60
The safety does not lock the trigger	61
Safety is difficult to move	61
Trigger does not return to the forward position	61
TROUBLESHOOTING AND BUTTSTOCK REPAIR	61
The buttstock is not held in the folded position	61
The shoulder rest is not retained by the spring	62
Bent buttstock link.	62
Bent shoulder rest.....	63
Loose rivet in at the connection of the shoulder stop with the links.....	63
Butt latch difficult to move	63
The buttstock is not held in the folded position	63
TROUBLESHOOTING AND MAGAZINE REPAIR.....	63
Cartridges are not fed from the magazine into the chamber	63
Magazine end cover falls off.....	66
Troubleshooting and repairing the oiler	67

TROUBLESHOOTING AND REPAIRING ACCESSORIES	67
Troubleshooting and repairing cleaning rod sections	67
 PART FOUR	
TECHNOLOGICAL CHARTS	68
Table 1	68
CORRECTING A BENT BARREL	68
Table 2	68
PREPARING HELICAL CYLINDRICAL SPRINGS	68
Manual winding of springs (springs with outer diameter up to 10 mm).....	68
Heat treatment of springs	68
Spring Chart	69
Table 3	70
ALTERATION OF THE BOLT BOX OF THE OLD STYLE AUTOMATIC WEAPON MOD. 1941 FOR USE OF THE NEW DESIGN PIN.....	70
Table 4	70
FITTING A NEW STOCK TO THE AUTOMATIC WEAPON MOD. 1941	70
 APPENDIX 1	 72
LIST OF MILITARY GAUGES AND INSTRUMENTS FOR THE 7.62 mm MACHINE PISTOL MOD. 1941	
 APPENDIX 2	 73
LIST OF MILITARY GAUGES AND INSTRUMENTS FOR THE 7.62 mm MACHINE PISTOL MOD. 1941	
LIST OF THE SIMPLE DEVICES AND GAUGES FOR REPAIRING 7.62-mm AUTOMATIC WEAPON MODEL 1941 and MODEL 1943	73
 Appendix 3	 81
INSTRUCTIONS FOR CLEANING RUST FROM STEEL PARTS.....	81
A. General information	81
B. Preparing Parts for Cleaning	81
C. Pickling	81
D. Washing in a solution of preservative.....	82
E. Wiping and lubrication.....	82
 APPENDIX 4	 83
INSTRUCTIONS FOR OXIDIZING PARTS OF AUTOMATIC WEAPONS	83
1. Surface preparation	83
a) Degrease	83
b) Washing in water.....	83
c) Etching	83
d) Rinsing in water	83

2. Oxidation.....	83
a) Oxidation.....	83
b) Rinsing	84
c) Washing with water.....	84
General notes on oxidation operations.....	84
3. Post-finishing	84
a) Immersion in soapy water	84
b) Drying	85
c) Oiling	85
Oxide coating quality control.....	85
Safety	85
APPENDIX 5	86
INSTRUCTIONS FOR PREPARING CASEIN GLUE AND GLUING WOODEN PARTS	86
Glue preparation.....	86
Gluing.....	86
General remarks	86
APPENDIX 6	87
INSTRUCTIONS FOR FINISHING THE STOCK	87
APPENDIX 7	88
TABLE FOR DETERMINATION OF HARDENING AND TEMPERATURES AND TEMPER BY THE COLOR OF THE HEAT AND TEMPERATURE	88
APPENDIX 8	89
DESCRIPTION OF SYMBOLS USED IN THIS MANUAL.....	89
CHART 1 (Fold out) 7.62 mm Submachine Gun Mod. 1941 Parts Diagram	90
TABLE OF CONTENTS	91